

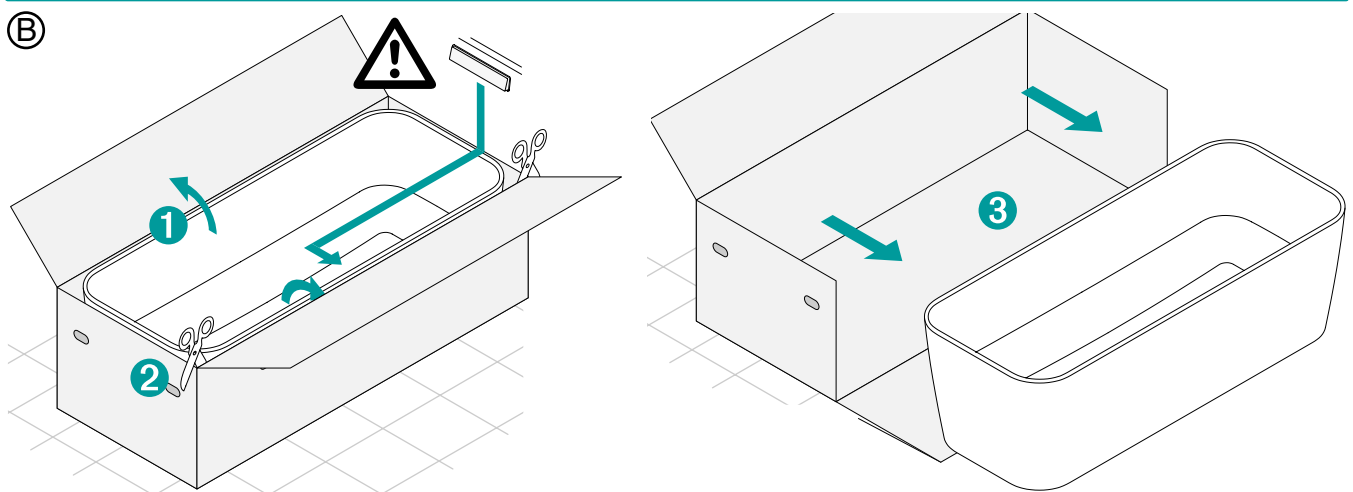
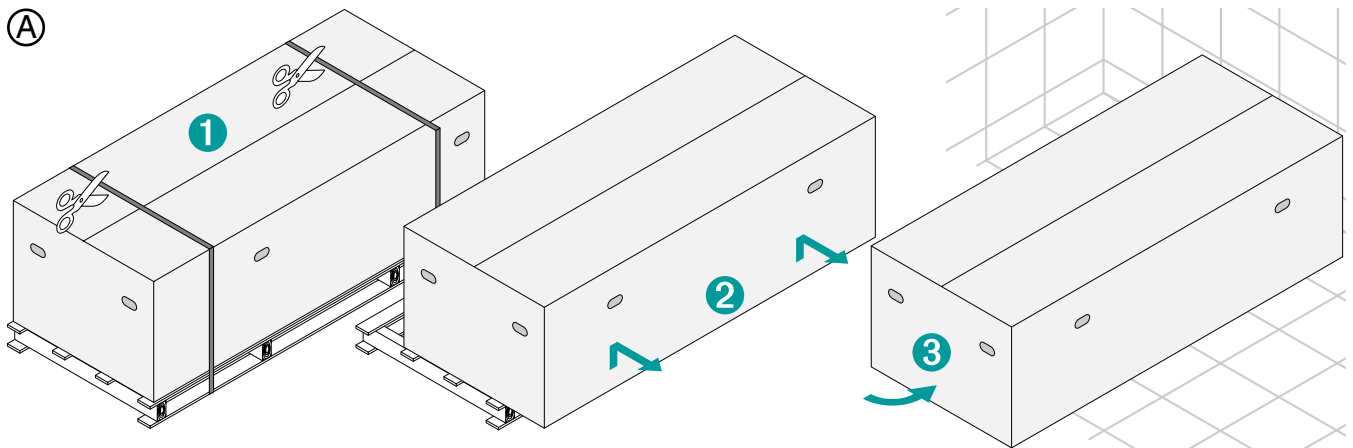
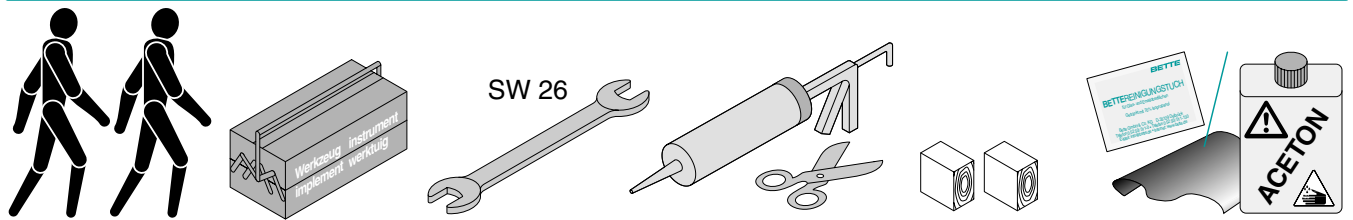
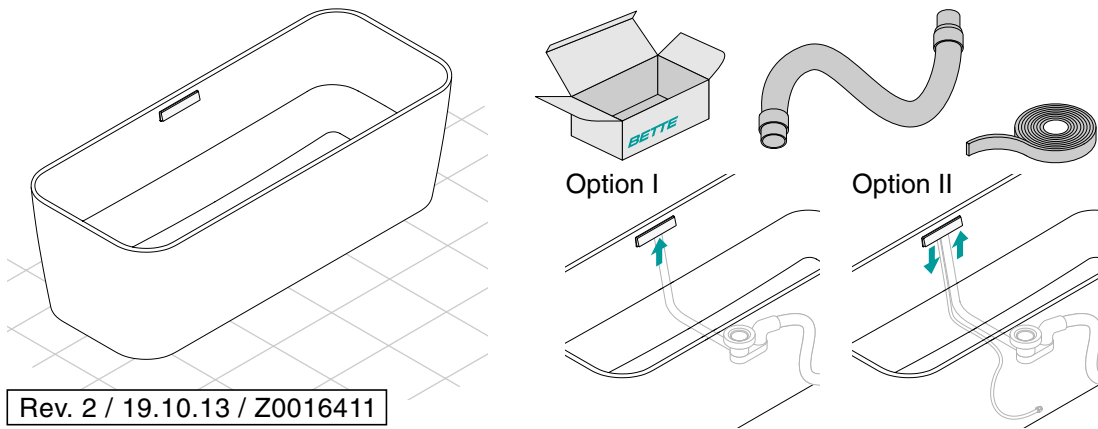
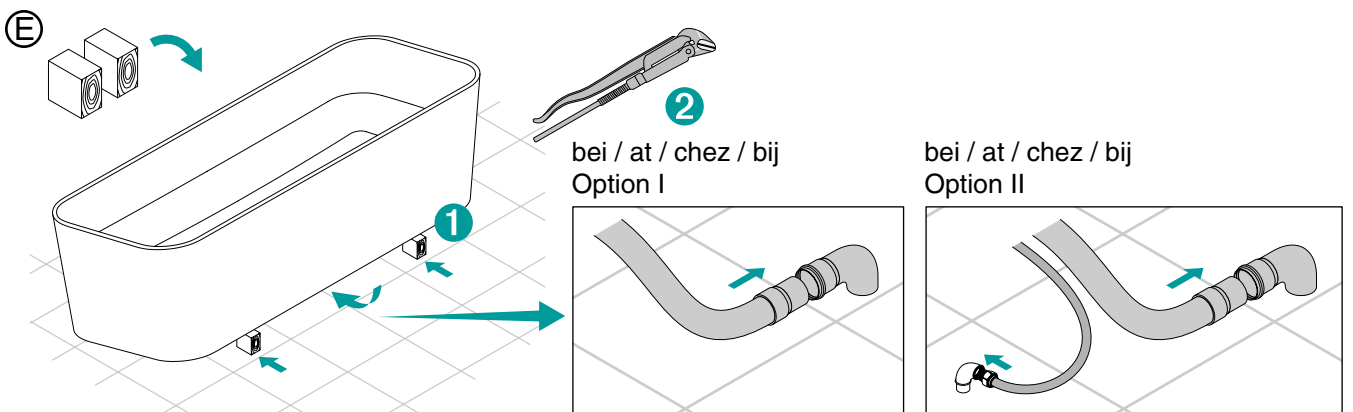


## BETTEART




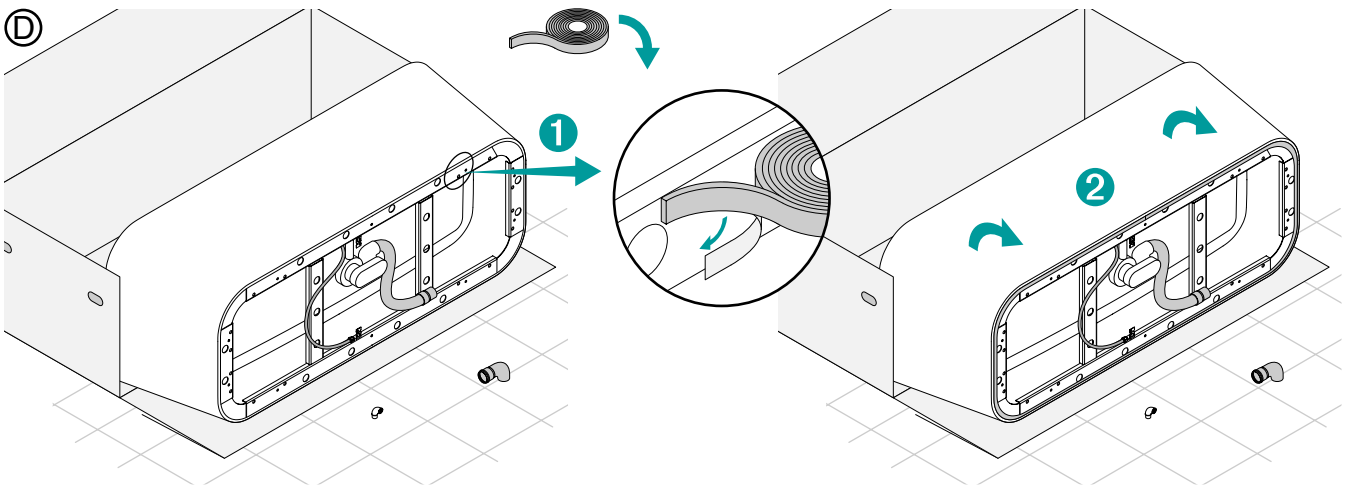


## BETTEART INSTALLATION

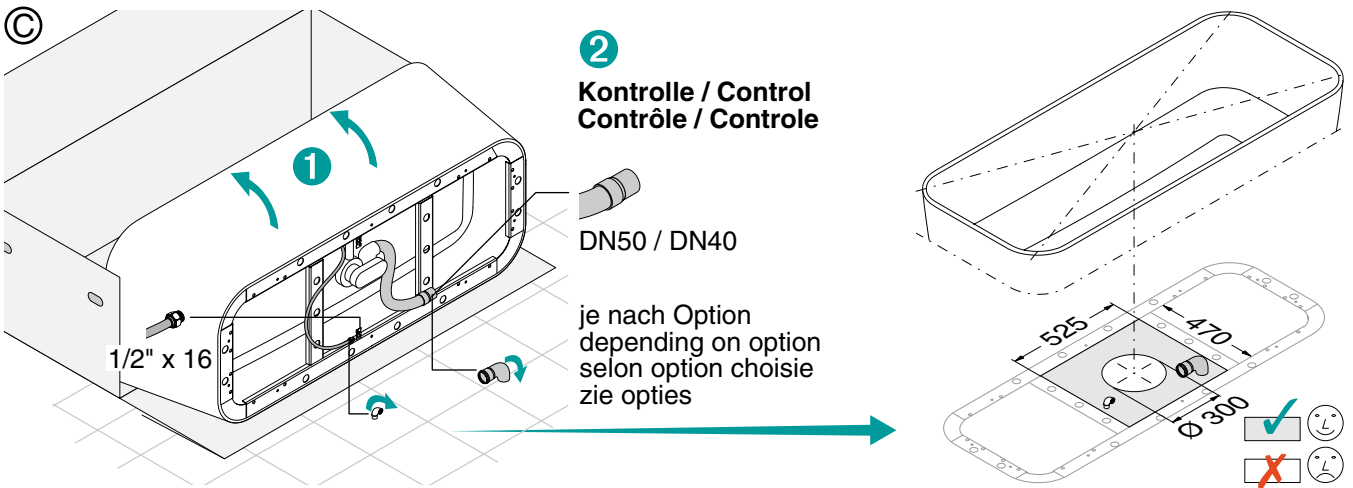

# BETTEART INSTALLATION

Ⓕ  
**Dichtigkeit prüfen**  
**Check leak tightness**  
**Vérifiez l'étanchéité**  
**Aansluiting controleren**

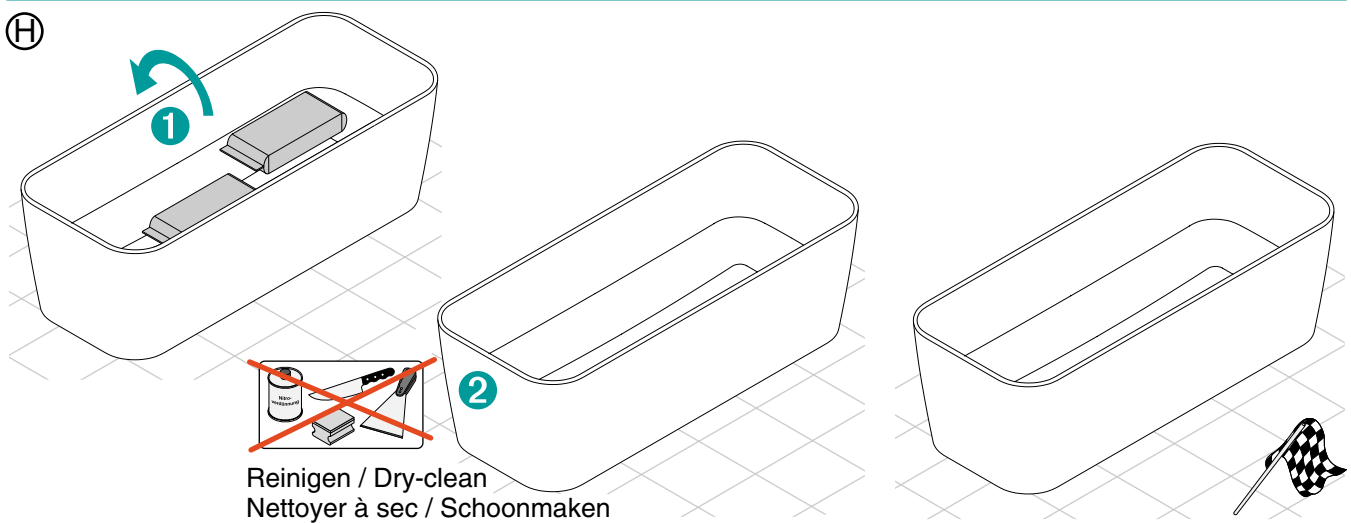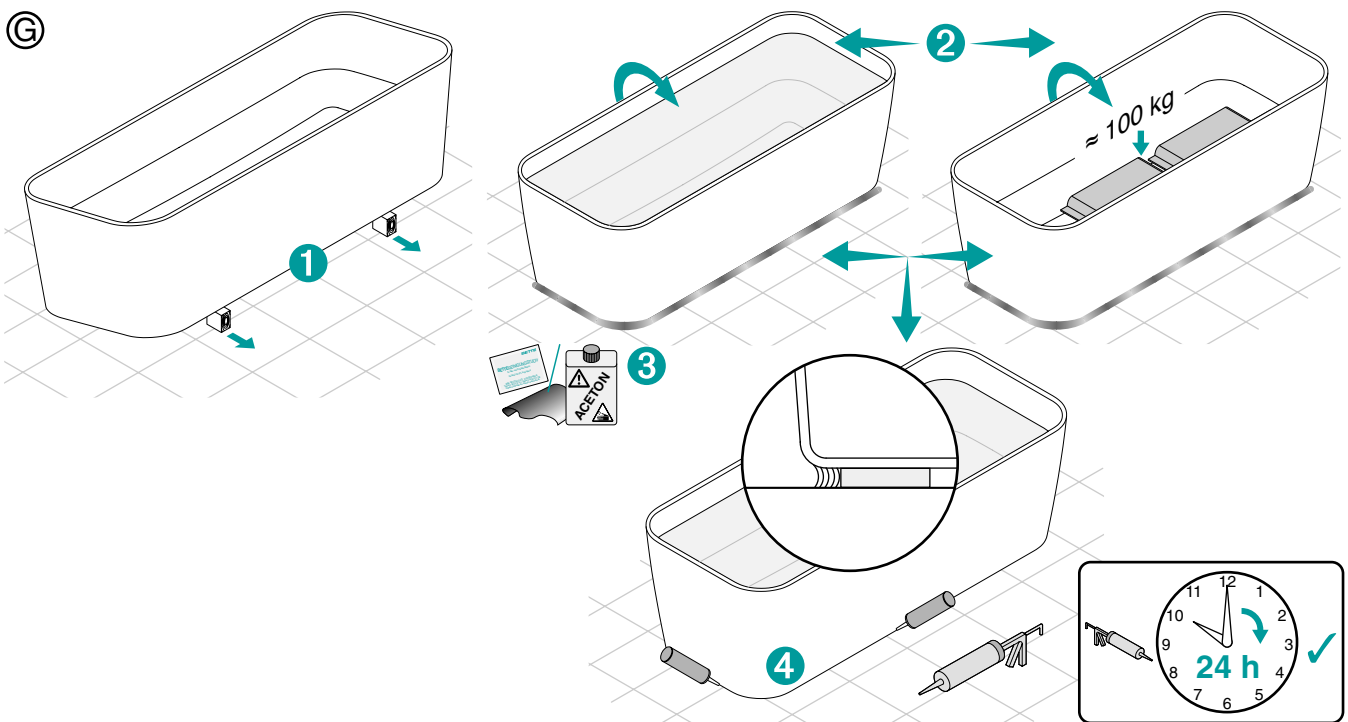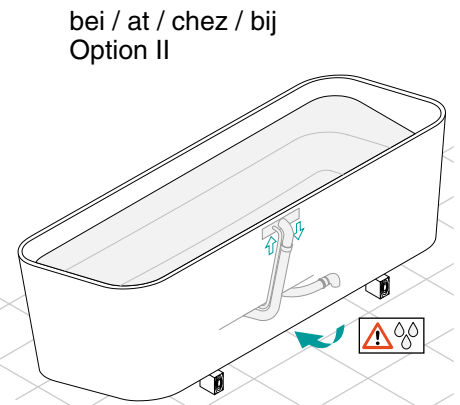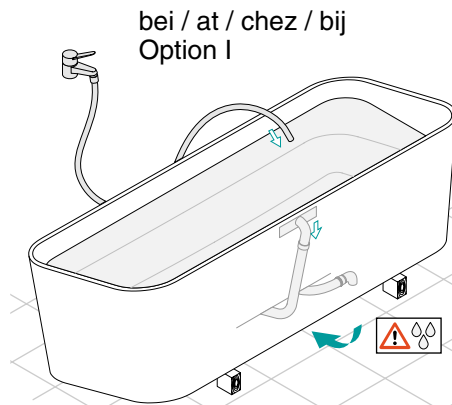

## BETTEART INSTALLATION

---

Bette GmbH & Co. KG  
Heinrich-Bette-Straße 1  
33129 Delbrück • Deutschland  
Telefon +49 5250 511-0 • Telefax +49 5250 511-130  
info@bette.de • www.bette.de

Bette GmbH & Co. KG UK  
The Courtyard • Hall Farm • Lockington  
GB-Derbyshire • DE74 2RH  
Phone +44 844 800 0547 • Fax +44 844 800 0548  
Info@bette.co.uk • www.bette.co.uk

Bette GmbH & Co. KG NL  
Selma Lagerlofweg 69  
NL - 3069 BT Rotterdam  
Phone +31 10 4423344 • Fax +31 10 2847889  
Info@bette.nl • www.bette.nl